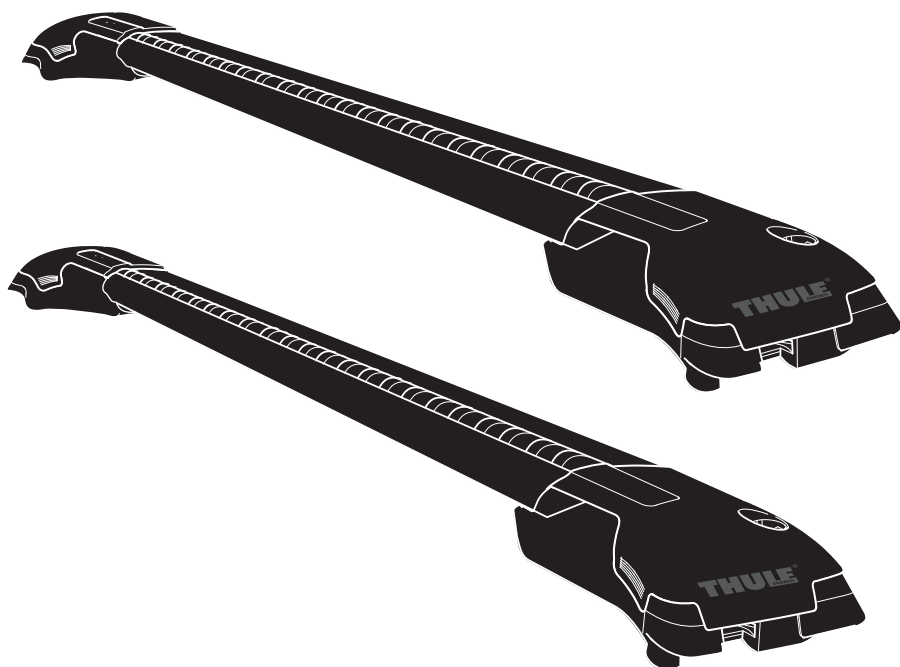 









Thule WingBar Edge 958X

> Instructions

**CITY CRASH**

Complies with ISO norm

       ISO 11154-E

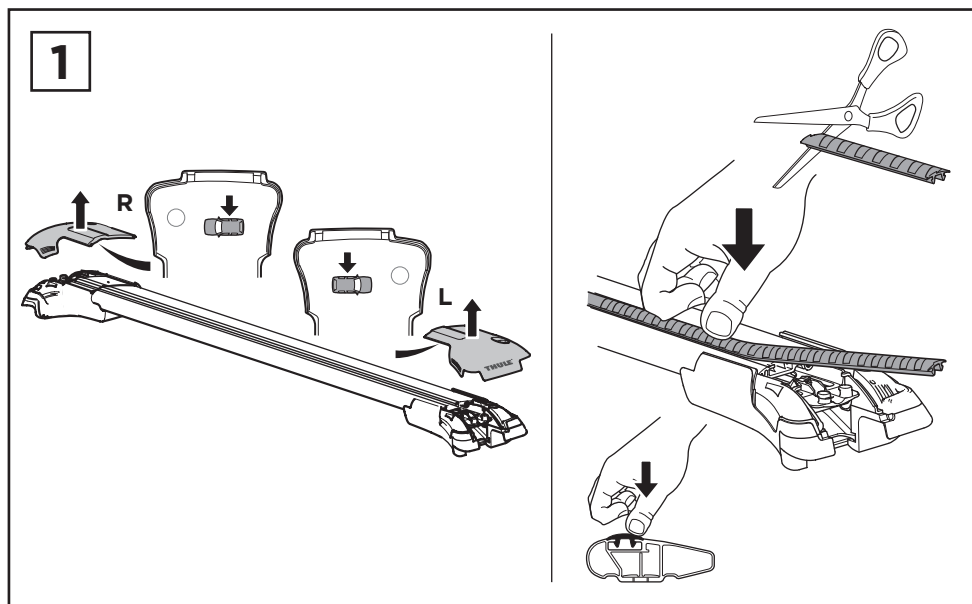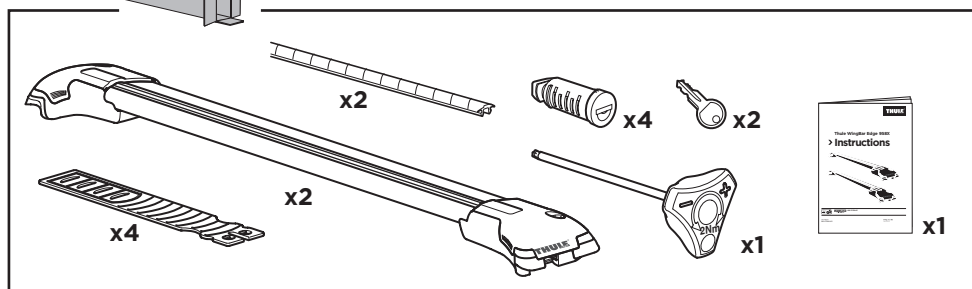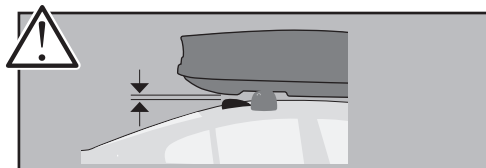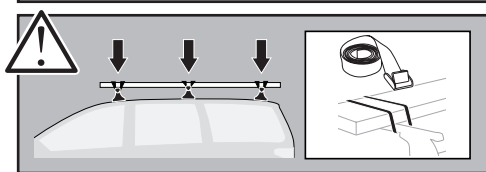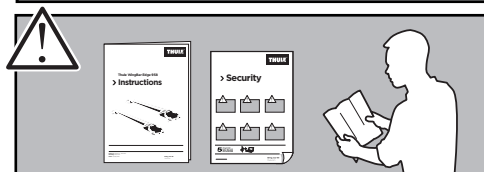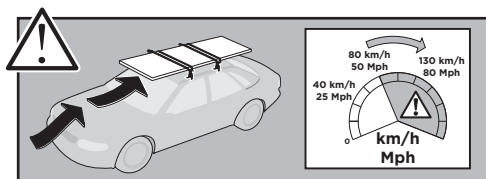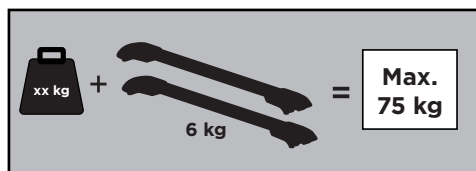


2






x2

 
1

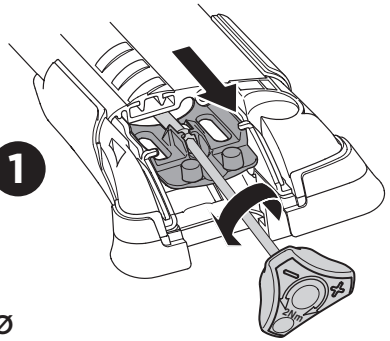

2

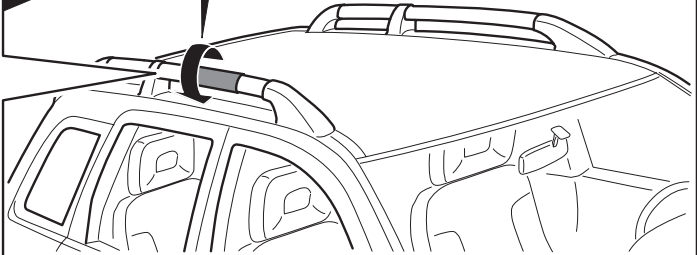   

3

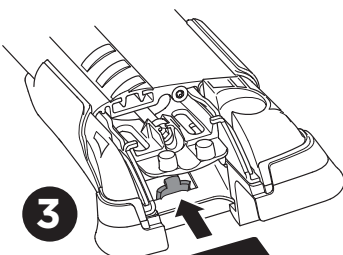 


4

3

2

 1

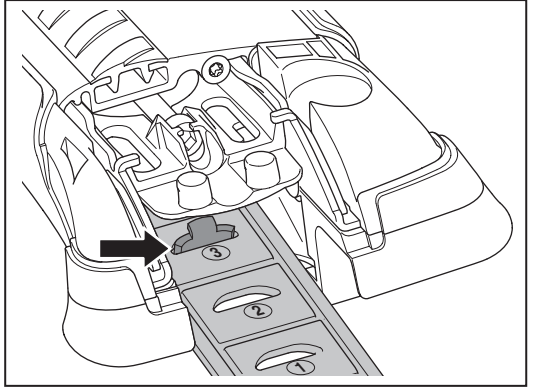

Rail Ø

Hole

79-107 mm

1

107-135 mm

 
2

 
 
135-163 mm

3






163-192 mm

4

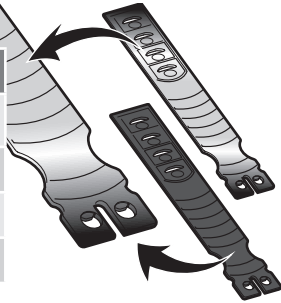

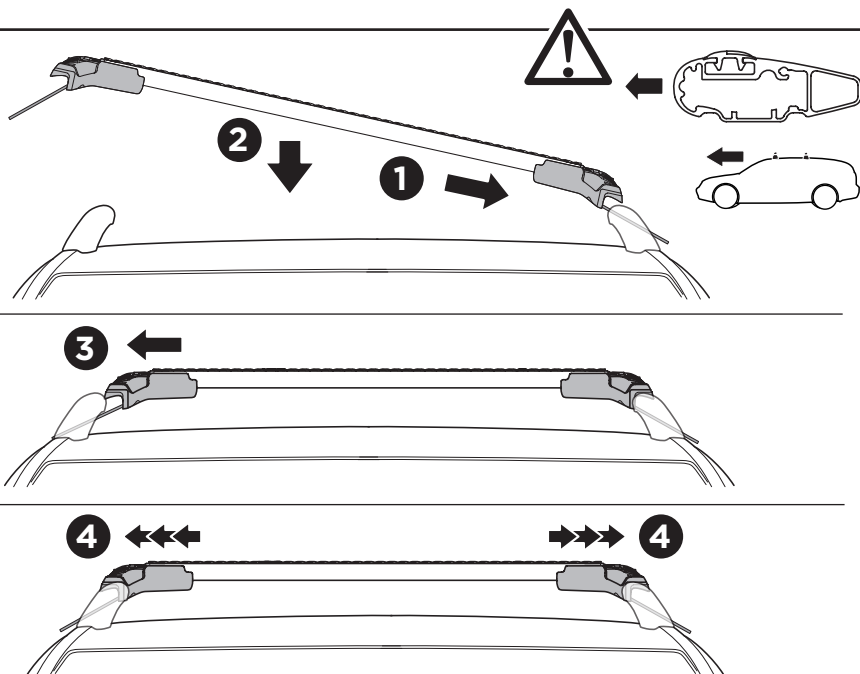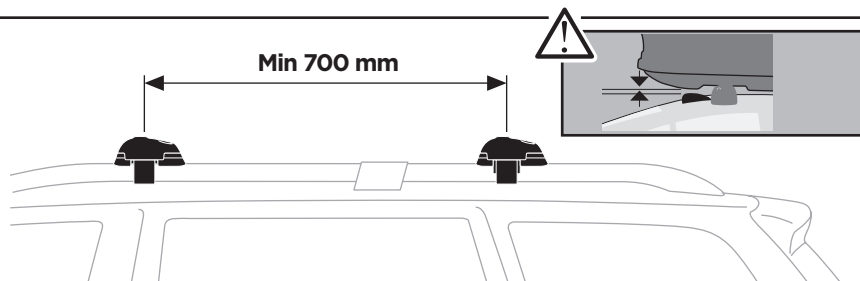
i**958100**
Wingbar Edge Rail S**958400**
Wingbar Edge Rail S/M**958200**
Wingbar Edge Rail M**958500**
Wingbar Edge Rail M/L**958300**
Wingbar Edge Rail L**3****4**

     5

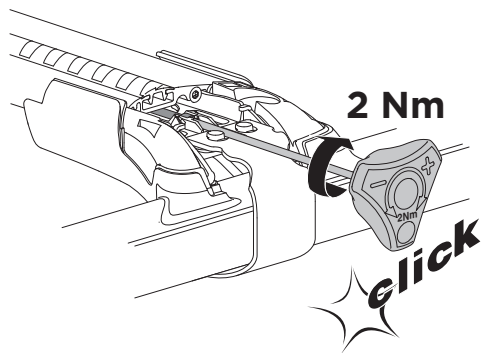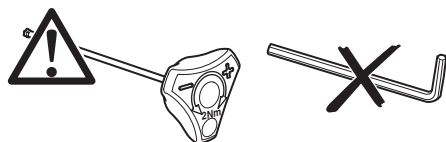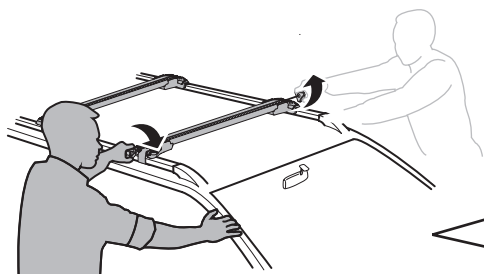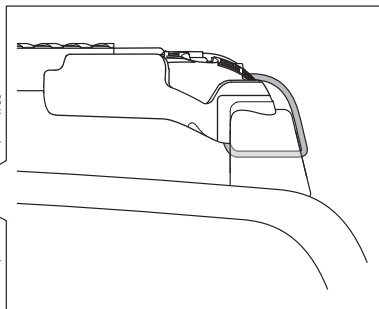
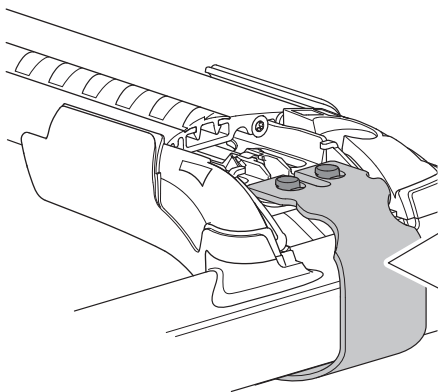




- EN** Tighten alternately
DE Die Schrauben abwechselnd anziehen
FR Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
IT Alternare il serraggio delle viti
ES Apretar alternativamente
PT Aperte alternadamente
SV Dra åt växelvis
DK Spænd skiftevis
NE Trekk til vekselvis
FI Kierrä vuorotellen
ET Pinguldage vaheldumisi
LV Pievelciet pamīšus
LT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно
UK Затягти по чергово
BG Затегнете последователно
CS Pokręťta bagażnika dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SL Privijajte izmenično.
HR/BIH Naizmjenično zategnite
RO Strângereți alternativ
HU Egymástól függetlenül szorítandó
EL Σφίγγετε εναλλάξ
TR Dönüşümlü sıkın
AR إحكام الربط بالتناوب
HE חזק לסירוגין
ZH 交替拧紧
JA 自動固定
KO 번갈아 조이기
TH ขึ้นโนแบบสลับ


 
6

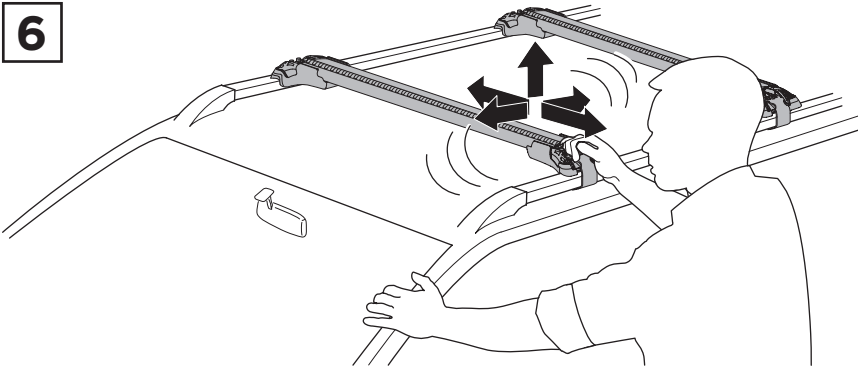

7

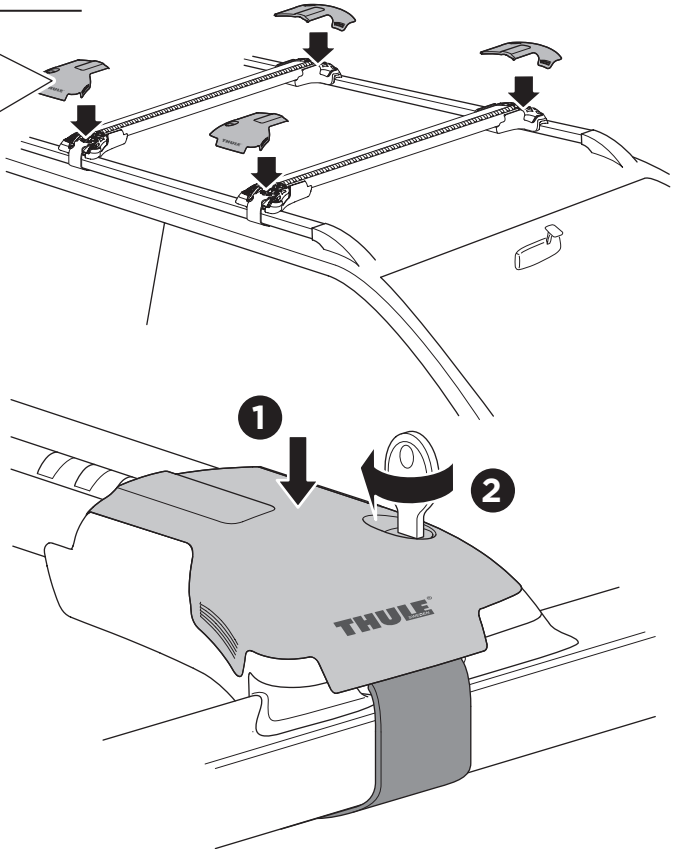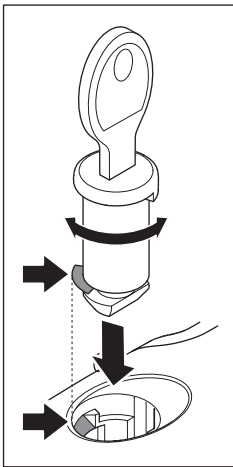  

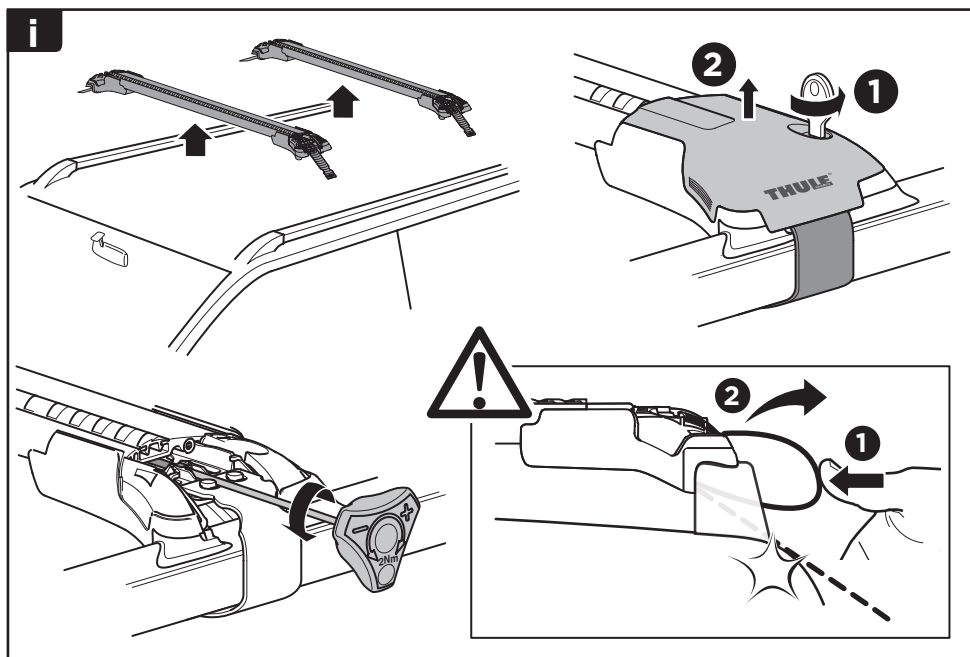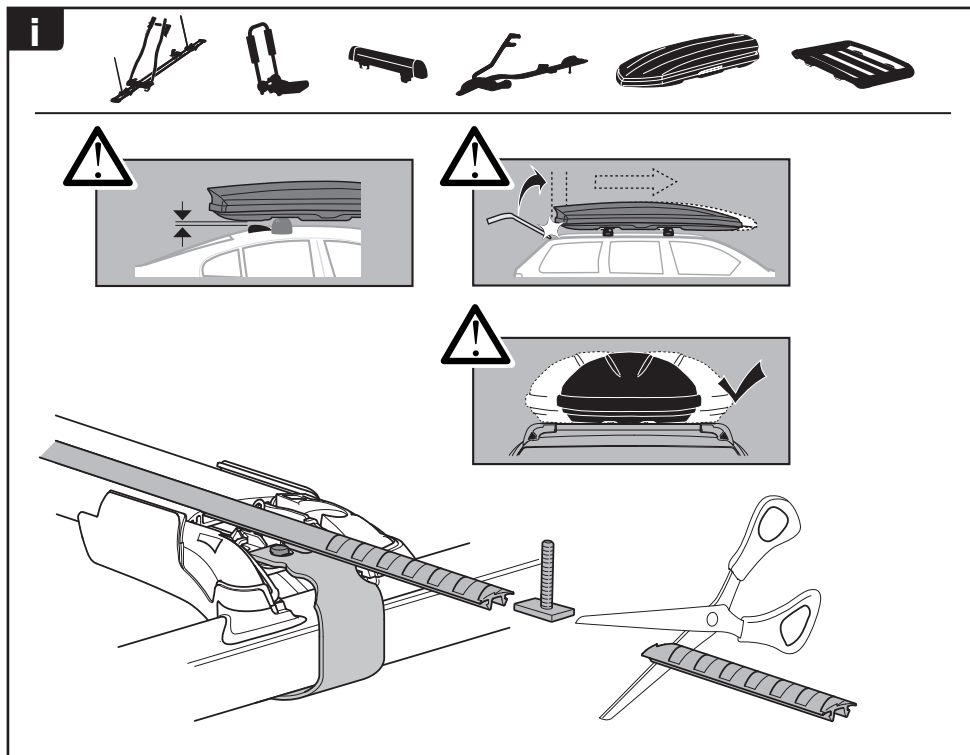  

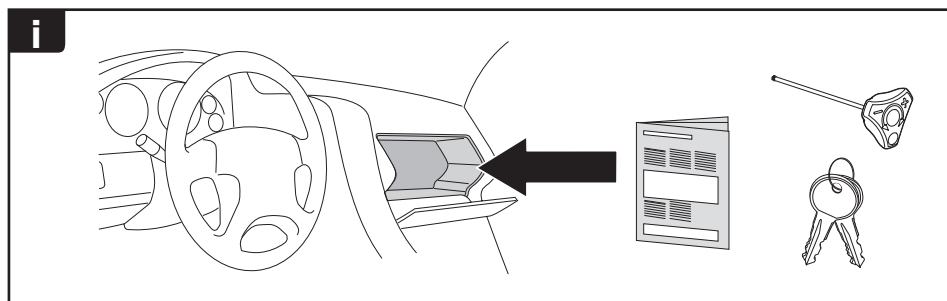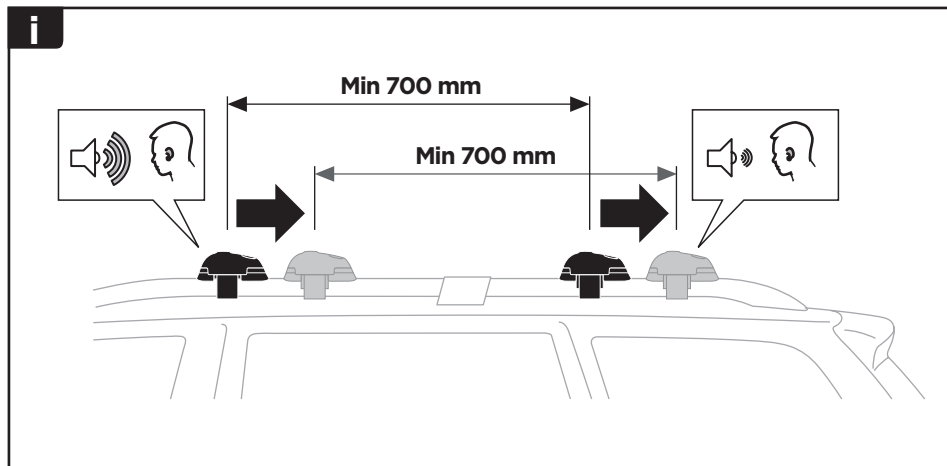  

Thule One-Key System

544	(x4)
596	(x6)
588	(x8)
452	(x12)